

KIT	DESCRIPTION	PART No
Console kit SH18	Kit includes panels that are added to the rear of the standard heater front cover to suit SH18 console installation (heater mounted on the surface of the wall).	093093
Console kit SH25	Kit includes panels that are added to the rear of the standard heater front cover to suit SH25 console installation (heater mounted on the surface of the wall).	093031
Console kit WF25 (standard)	Kit includes panels that are added to the rear of the standard heater front cover and panels to cover flue to suit WF25 console installation in a room with a ceiling height of up to 3m (10 ft)	089973
Console kit WF25 (long)	Kit includes panels that are added to the rear of the standard heater front cover and panels to cover flue to suit WF25 console installation in a room with a ceiling height of up to 3.6m (12 ft)	089980
Infill panel Kit WF25	Kit to be use when replacing a Wall Furnace (Inbuilt installation) where the height of the wall cavity exceeds 1.8m (6ft)	085135
Flue kit (Co-Ax) Horizontal SH18, SH25, WF25.	Kit includes parts required to flue the space heater through the wall behind the heater directly to outside. It is used where the heater is installed as either inbuilt or console on an external wall. Kit also includes heater mounting brackets and flue terminal.	093048
Flue kit (Co-Ax) Vertical SH18, SH25, WF25.	<p>Kit includes parts required to flue the space heater up inside a wall cavity, and through the roof space to outside. It can be used where the heater is installed on an internal or external wall as a console. Kit also includes heater mounting brackets and flue terminal. Kit does not include roof flashing.</p> <p>Kit includes sufficient flue lengths to suit a 2.4m (8ft) ceiling height and a roof space cavity height of 1.6m. For installations where these dimensions are exceeded the co-ax flue extension kit/s will be required.</p>	093055
Flue, Extension kit. (Co-Ax) SH18, SH25, WF25.	Kit includes parts required to extend the flue by 0.9m (3ft) .	093062
Flue, Offset kit (short) (Co-Ax) SH18, SH25, WF25.	Kit includes parts required to offset the flue, to avoid structural members inside a roof cavity, and in the case of a Wall Furnace replacement, to return new flue to the center of the old roof penetration.	089997
Flue, Offset kit (long) (Co-Ax) SH18, 25, WF25.	Kit includes parts required to offset the flue, for example, to avoid structural members inside a roof cavity. It would be used in conjunction with a " Co-Axial VERTICAL flue kit " if required.	093079
RF control kit. SH18, 25, WF25.	Kit includes an RF control and parts required to enable it to operate with the space heater.	093086
Rear register kit. SH18, 25, WF25.	<p>Kit includes parts required to install a manually-operated rear register. This allows some warm air to be directed to a room behind the wall on which the heater is installed. It can only be used where a heater is installed on an internal wall.</p> <p>The rear register can be used to divert up to 30% of the heat output to the rear (1.8kW for SH25, 1.3kW for SH18 models).</p>	093109
Flue guard kit. (Flue kit Rear wall)	Kit includes a flue guard to be fixed to an outside wall to protect the flue terminal from contact. It is recommended that this be fitted where children are likely to be able to touch the flue terminal.	079073

All kits include instructions and fasteners.